

WE'RE YOUR TECHNOLOGY CADDIE



TIME WARNER CABLE PRESENTS

THE *MASTERS*

IN

3D

With the best national games in No Fee HD and exclusive local sports On Demand, Time Warner Cable is already your go-to for great sports action. And now we're helping you step into the future with cutting-edge 3D technology. This guide will help get you started. So you can watch The Masters like you've never seen it before. In incredible 3D.

 TIME WARNER CABLE
SPORTS

NAVIGATION INSTRUCTIONS

How to turn TV into 3D mode and watch Masters Content

Navigator:

1. Press **"Settings"** on your remote control.

2. Use < > to highlight **"Display"**, then press Up/Down arrows to highlight **"Output Resolution"** and press **"Select"** or **"OK"** on your remote control.

3. Use Up/Down arrows to highlight **"1080"** then press **"Select"** or **"OK"** on your remote control.

4. Tune to your HD Showcase On Demand channel and select the 3D Masters content you want to watch in 3D and press **"Select."** Confirm your order by pressing **"Select"** again.

5. Follow instructions for your specific TV model on pages 3-4.

TV Guide:

1. Be sure your set-top box is plugged into a power outlet and connected to your TV.

2. Power off the set-top box and then immediately press the **"Menu"** key on the front panel. If your TV is on, the on-screen menu lists the settings you can configure.

3. Press the **"Down Arrow"** on your remote control to highlight **"YPbPr Output."** Press the **"Right Arrow"** and select **"1080i"** and then press the **"Menu"** button to save and exit.

4. Tune to your HD Showcase On Demand channel and select the 3D Masters content you want to watch in 3D and press **"Select."** Confirm your order by pressing **"Select"** again.

5. Follow instructions for your specific TV model on pages 3-4.

SARA:

1. Press **"Settings"** on your remote control.

2. Scroll to **"Picture Format"** or **"Picture Size."** Press **"Right Arrow"** or **"Left Arrow"** to view options and select **"1080i"**.

3. Press **"Select"** to save settings.

4. Tune to your HD Showcase On Demand channel and select the 3D Masters content you want to watch in 3D and press **"Select."** Confirm your order by pressing **"Select"** again.

5. Follow instructions for your specific TV model on pages 3-4.

APPROVED 3D TVS

Panasonic 3DTV

Model #s:

Television: TC-P50VT20 (50" plasma)

Glasses: TY-EW3D10

Procedure

1. Press "**Viera Tools**" button on remote that came with TV (above "**Return**" button on top right of remote).
2. Select the 3D icon by pressing the "**OK**" button on TV remote. You will now see a 3D settings screen.
3. Set "**3D Eyewear**" field to "**ON**".
4. Set "**3D Input Format**" to "**Side by Side**".
5. "**Left/Right Swap**" should be "**Normal**" by default. "**Diagonal Line Filter**" should be "**Off**" by default.
6. Press and hold power button on 3D glasses for 2-3 seconds, then release. "**Power**" button is located on the bottom of the left temple bar (aka glasses stem).
7. You should now see the picture in 3D.

NOTE: Please note, after changing your TV setting to 3D mode, Time Warner Cable's on-screen programming guide will become distorted and illegible. After you have finished viewing in 3D, upon switching your TV back to standard mode the on-screen guide will be restored. To turn the TV back to 2D mode, follow steps 1-3, and set "3D Eyewear" field to "OFF".

APPROVED 3D TVS

Samsung 3DTV

Model #s:

Televisions: UN55C7000 (55" LCD), UN46C7000 (46" LCD)

Glasses : SSG-2100 or SSG-2200

Procedure

1. Press "**3D**" button on remote that came with TV (lower right of remote).
2. Press "**Power**" button on glasses. Button is located on top of the right temple bar (aka glasses stem).
3. Select "**OK**" on the TV remote.
4. Select **3D format** as **side-by-side**. This is depicted as an icon with two stick figures, side-by-side, separated by a vertical line.
5. You should now see the picture in 3D.

NOTE: Please note, after changing your TV setting to 3D mode, Time Warner Cable's on-screen programming guide will become distorted and illegible. After you have finished viewing in 3D, upon switching your TV back to standard mode the on-screen guide will be restored. To turn the TV back to 2D mode, follow step 1 above, and select "Off" with the TV remote.



CALL FOR CUSTOMER SERVICE/QUESTIONS:

877-671-4206

Legal:

To receive 3D On Demand service, a 3D TV purchased after March 2010, compatible 3D glasses, Digital Cable, remote and an HD or HD DVR set-top box are required. The HD converter must be connected to your 3DTV via an HDMI cable only (HDMI adapters, including DVI to HDMI are not compatible) and viewer must wear glasses that are compatible with their 3D TV. Some services are not available to CableCARD customers. Not all equipment supports all services. DVR service is an optional service available for an incremental charge. Subject to change without notice. Not available in all areas. Some restrictions apply.